

Gentner ALS Do's and Don'ts

Thank you for making the wise decision to choose a Gentner system for your Assistive Listening needs. Like all systems, there are few simple procedures that will help to make your system function at it's best. Below are a few commonly forgotten do's and don'ts.


- 1) When tuning an RX-1A receiver, **don't** use a metal screwdriver.



The screwdriver will act as an antenna, giving you a false reception reading. We recommend that you use the plastic tweezer provided with the TX-37A.

- 2) **Do** tune the RX-1A in the audience area, not right by the TX37A or antenna.
3) Because your body can act as an antenna, **do** take a team approach to adjusting the TX-37A (one person adjusting the TX controls, and another person listening to a receiver who is at least 10 feet from the transmitter).

- 4) **Do** use the ground plane antenna provided with the TX-37A. Place the ground plane at least 6 feet from the transmitter & line-of-sight to the receiver. **Do not** connect antenna to the back of the TX37A.

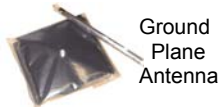

- 5) **Do** keep the BC-10A plugged in. If you leave belt packs in the BC-10A charger with the charger unplugged (they will discharge the batteries the same way that they were charged).

For more detailed instructions, see the enclosed manuals or contact your local Gentner dealer.

()
Plastic tweezer for tuning the RX-1A receiver



Add a BC-10A Recharger to your system. Used with NiCad batteries. Contact your dealer.